



## Headlights

### ► Type A

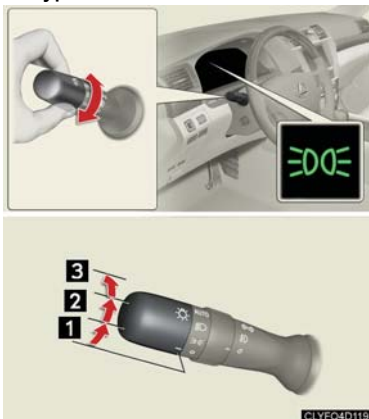


- 1 The instrument panel, side marker, parking, tail, daytime running lights and license plate lights turn on.
- 2 The headlights and all lights listed above (except daytime running lights) turn on.
- 3 The instrument panel, headlights and other exterior lights turn on/off automatically in accordance with ambient light levels.

### ► Type B

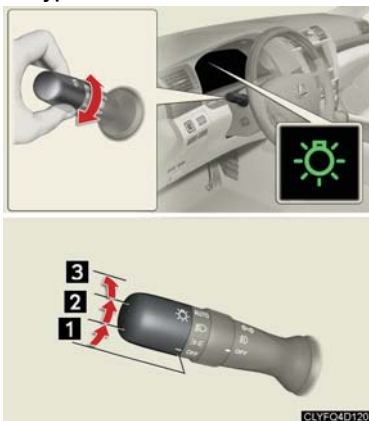

- 1 The instrument panel, side marker, parking, tail, daytime running lights and license plate lights turn on.
- 2 The headlights and all lights listed above (except daytime running lights) turn on.
- 3 The instrument panel, headlights and other exterior lights turn on/off automatically in accordance with ambient light levels.

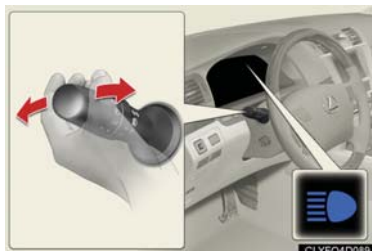

To engage the high beams, push the lever away from you.

To flash the high beams temporarily, pull the lever toward you.

Vehicles with the Automatic High Beam:  
Pushing the lever forward when the headlight switch is in the "AUTO" position activates the Automatic High Beam.

## ■ AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.





To cancel the system, press the "AFS OFF" switch. The indicator comes on when the system is off.

Press the switch again to reactivate the AFS.

## Fog Lights



### ► Type A

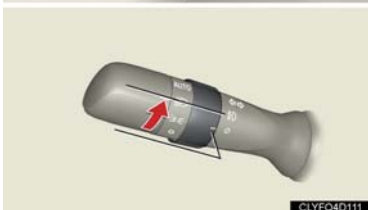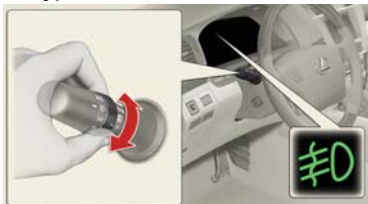

CLYFQ4D111

The fog lights can be used only when the headlights (low beam) are on.

### ► Type B

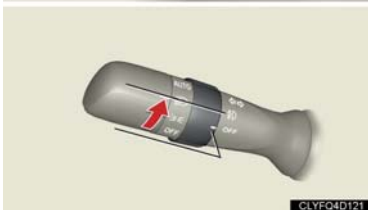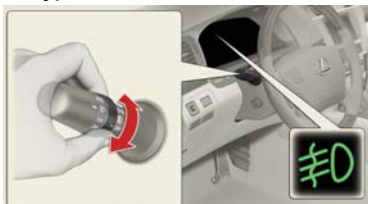

CLYFQ4D121


The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washer

### ► Type A



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation


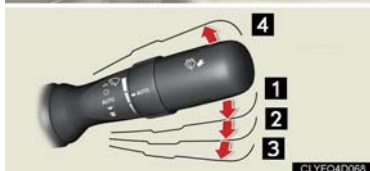


### ► Type B



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation



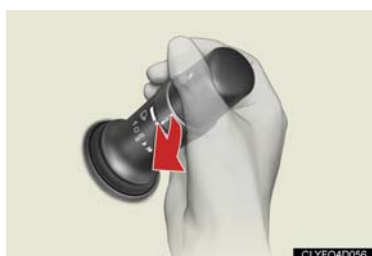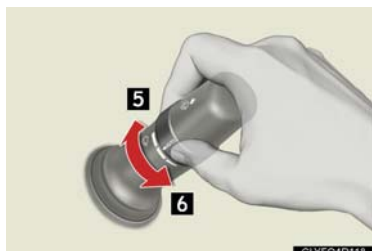

Sensitivity can be adjusted by turning the band.

**5** Increases the sensitivity

**6** Decreases the sensitivity

To spray washer fluid, pull the lever. The wipers will operate automatically.

## Instrument Panel Light Control



- 1 Darker
- 2 Brighter

## Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.